



LumaWarm Top Mount Installation

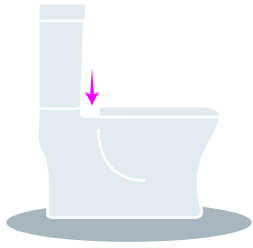


Top Mount Installation
Bolt holes only accessible through top-side access

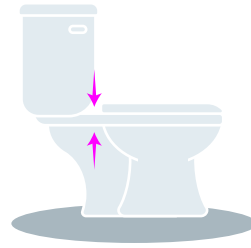

Standard Installation
Bolt holes accessible above and below porcelain


Some toilet fixtures have top-side access only. If you cannot access the bolt holes and screws from underneath your toilet fixture, you will need to use the LumaWarm Top Mount Mounting Hardware.

Kit Includes: 2 mounting blocks, 2 Phillips screws
(Visit brondell.com or call us at 888-542-3355 to purchase)

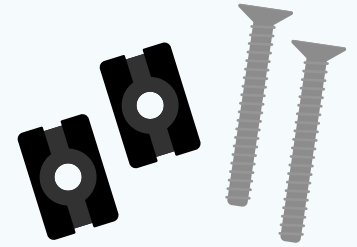


- 1 Insert the Phillips screws through the holes in the mounting blocks as shown.

You may also use the screws from your original toilet seat.

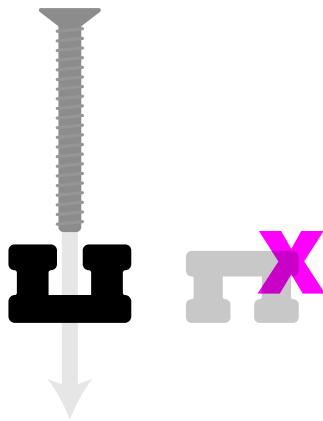

- 2 Use a Phillips screwdriver to fasten the screws into your toilet fixture bolt holes until snug. Make sure the mounting blocks are positioned vertically.

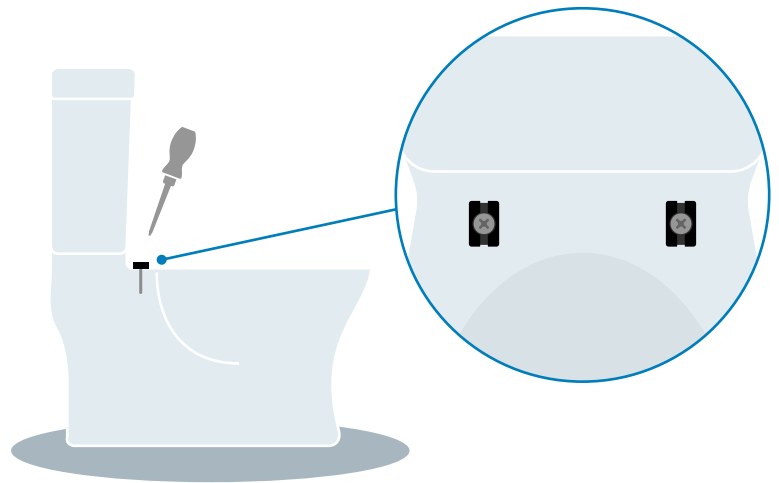

- 3 Slide the LumaWarm seat onto the mounting blocks, being careful to line up the LumaWarm's mounting track with the mounting blocks.

